

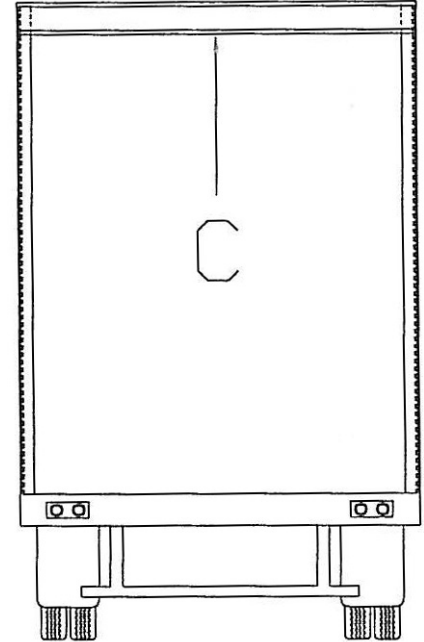
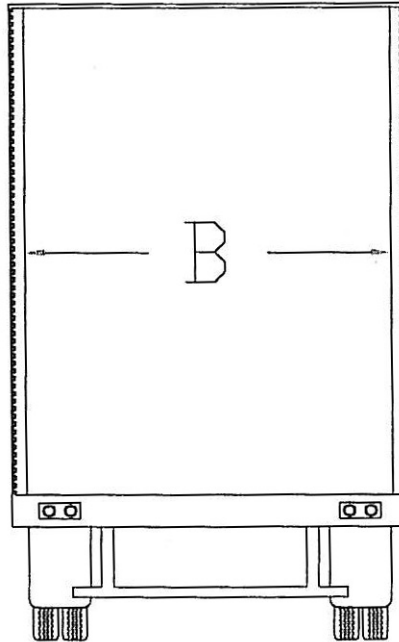


# Basic Installation Conversion/Close Out Kits

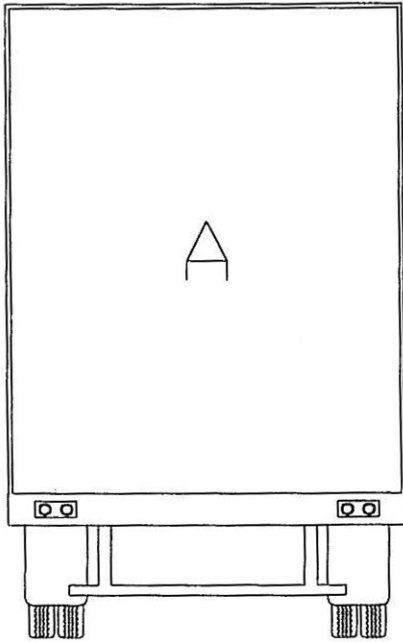

- A** Clear rear opening of all obstructions
- B** Weld corner post in place with 1/2" overlap on body.
- C** Weld header section along top of opening overlapping corner post

## CORNER POST DETAIL

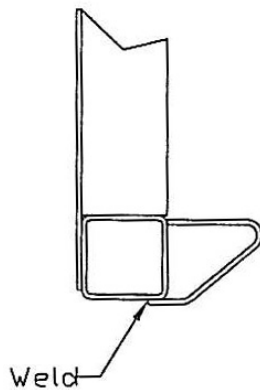

## HEADER DETAIL

